



# Pro-Elast® Assembly Instructions


Sylvan Precast Systems  
7400 SW Cherry Drive  
Portland, OR 97223-8041 USA  
PH: (800) 842-1990  
Fax: (503) 608-3939

## Assembly Instructions

*For Installation of Pro-Elast® sealing system*



1. Make sure the base is firm and free of grease, oil and dust.  
Apply the Inno-Elast® glue and distribute on the surface with a serrated trowel. (apply thick layer 1.5mm)

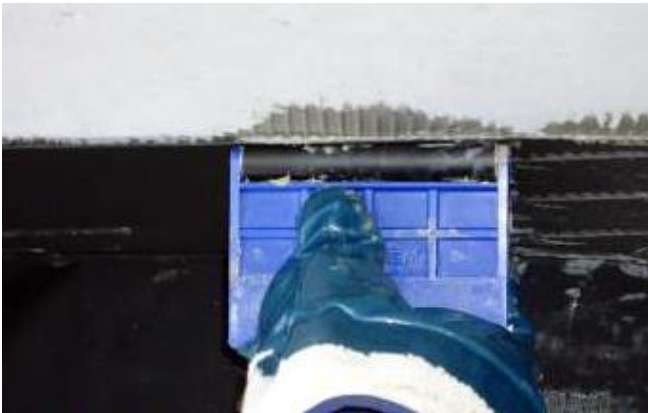

2. Apply the Pro-Elast with a roller making sure no air bubbles remain under the foil. Overlap ends at least 4" and use Inno-Elast® glue to seal all edges.



3. Allow Pro-Elast curing time as outlined in Technical Data Sheet, making sure to protect Pro-Elast® from any external damage while curing.